

Build SOMETHING



BY **Kreg**

Project Plans



ONE-OF-A-KIND CUTTING BOARD

This solid-maple cutting board offers ample space for cutting and a comfortable handle, but the most-unique feature lies underneath. A cutout in the lower layer allows you to slip a plate under the edge, so that you can slide the things you've cut easily off the board without spilling.


Follow the steps below to complete this project.

1 Choose the Right Material

Though it may be tempting to use any beautiful hardwood for a cutting board, there are some important safety factors to take into consideration. Only a tight, closed-grain wood (like Maple) is truly appropriate for cutting surfaces. Hardwoods in general are durable enough to perform as a cutting board; however, woods such as Oak, Ash, and Hickory should never be used due to their open grain. Open-grain woods have large pores that can harbor germs, bacteria, and decaying food particles, making them unsanitary and unsafe. Also, as you cut on an open-grain wood, tiny wood splinters can break off and wind up in your food.


2 Make the Sides

Cut four Sides to length from 1x6 maple, as shown in the cutting diagram. Set your pocket-hole jig for 3/4"-thick material and drill pocket holes in each Side at the locations shown.

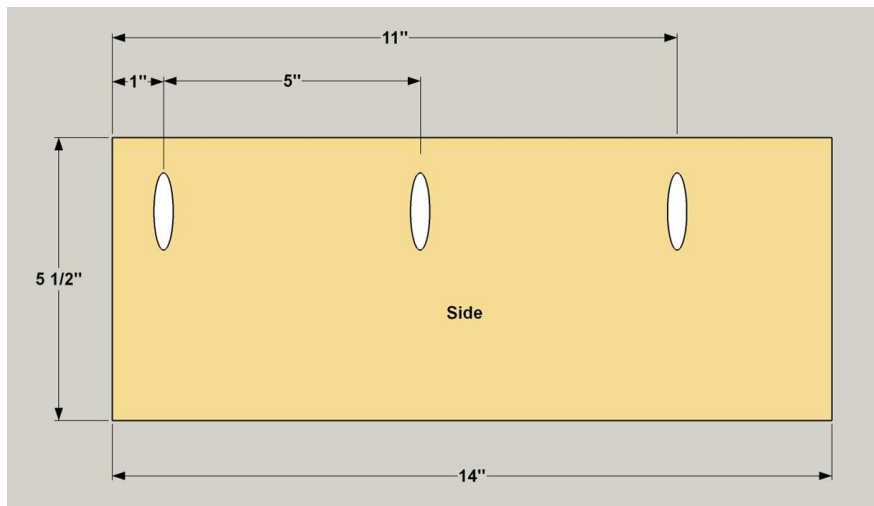


3 Cut the Handle and Bottom Center

Cut one Handle and one Bottom Center to length from 1x3 maple, as shown in the cutting diagram. Set the Bottom Center aside for now. Lay out the pattern and the hole on the Handle, and then cut the Handle to shape using a jigsaw. Then drill the hole. Sand the Handle shape smooth.

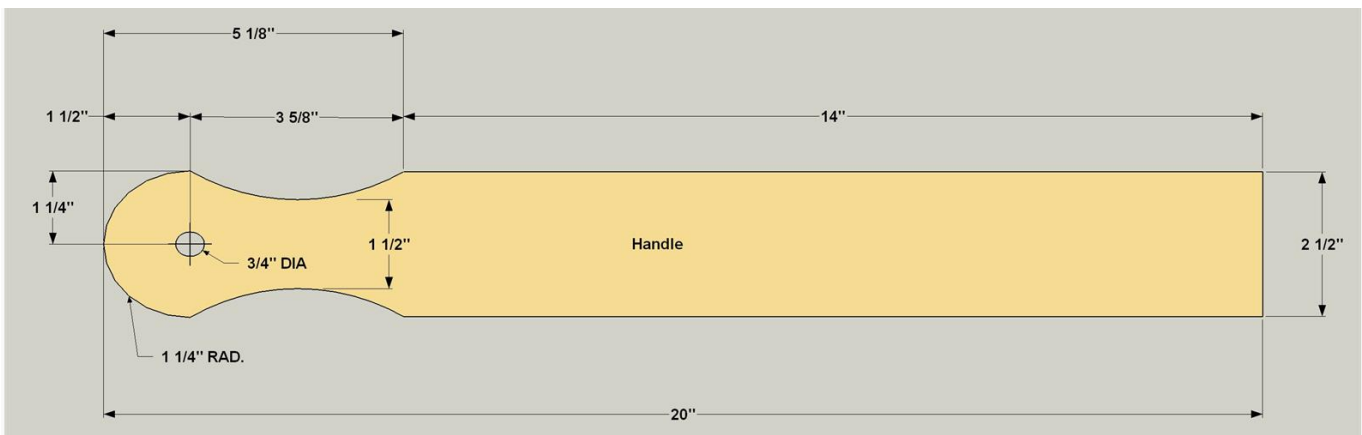


4 Assemble the Bottom Panel

Assemble the bottom panel using two Sides and the Bottom Center. Spread waterproof wood glue on the edges, and then secure the parts with 1 1/4" fine-thread pocket-hole screws. Use clamps and take care to get the faces as flush as possible. After the glue dries, sand the panel flat and smooth.

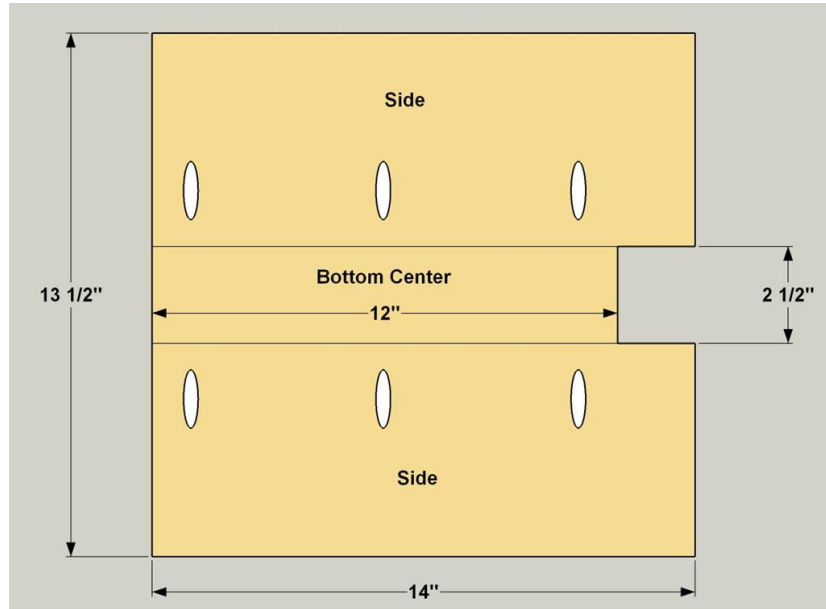


5 Cut the Plate Recess

Lay out the plate recess in the bottom panel as shown. Cut out the pattern using a jigsaw and a fine-tooth blade. Sand the edge smooth.

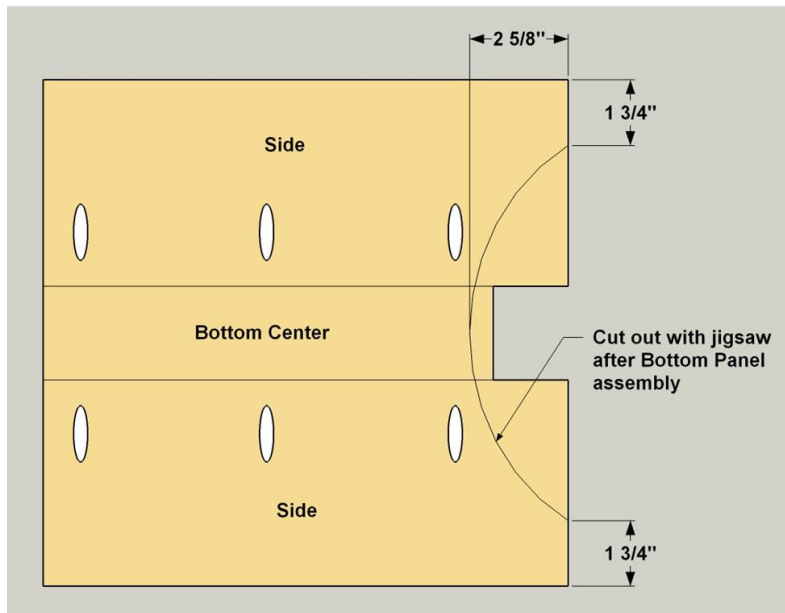


6 Assemble the Top Panel

Attach the Handle to the two remaining Sides using waterproof glue and 1 1/4" fine-thread pocket-hole screws as shown. Again, make sure that the Handle is flush with the two Sides. Sand the panel smooth and flat after the glue dries.

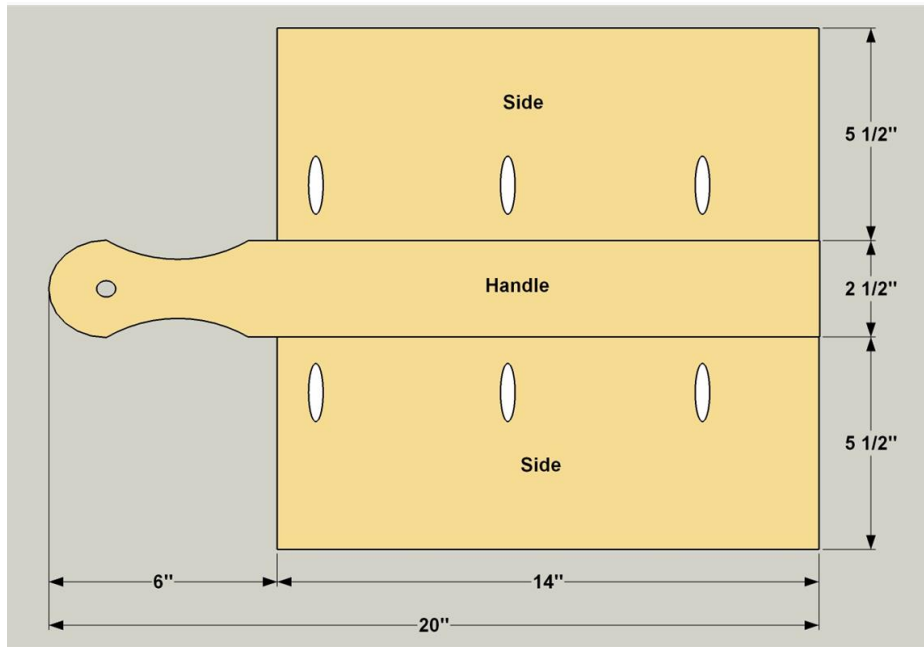

7 Glue Up the Cutting Board

Apply waterproof glue to the face of the lower panel that has pocket holes, spreading a thin layer evenly over the surface. Place the lower panel on the pocket-holed face of the upper panel. Align the edges of the two panels and secure them with clamps. Allow the glue to dry and then remove the clamps. Sand the edges and faces smooth, and then slightly round off the exposed corners with a sander to get rid of the sharp edges.

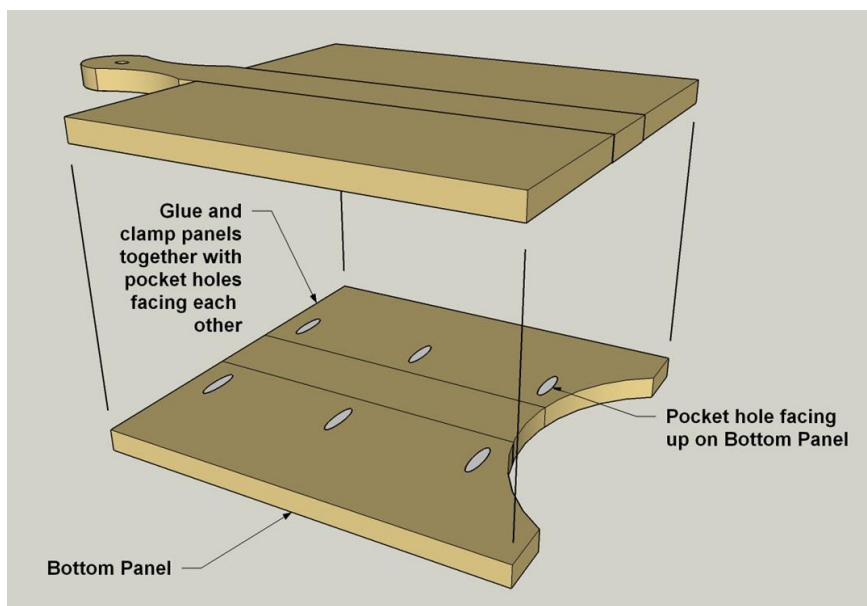

8 Apply the Correct Finish

Because the Cutting Board is intended for preparing food, it's important to use a food-safe finish. A couple examples of these are butcher block oil, or salad bowl finish. We chose butcher block oil. Essentially, both of these finishes are mineral oil stabilized with Vitamin E--a compound approved by the FDA as safe for food preparation surfaces. Apply a liberal coat to all surfaces, and let it soak in, Reapply to areas that soak in completely. Let the cutting board sit for 15 minutes, and then wipe off any excess. You'll want to reapply oil as the cutting board dries out from use and washing.

Tools Used:

- | | |
|----------------------|--------------------------|
| (1) Kreg Clamps | (1) Kreg Pocket-Hole Jig |
| (1) Drill (cordless) | (1) Sander |
| (1) Jigsaw | (1) Square |
| (1) Miter Saw | (1) Tape Measure |

Materials Required:

Wood Products:


- (1) 1x6, 72", Board
- (1) 1x3, 36", Board

Hardware/Supplies:

- (12) 1 1/4" fine-thread pocket-hole screws
- (1) waterproof wood glue
- (1) butcher block oil

Parts/Cut List:

- (4) Side, 3/4" x 5 1/2" x 14" maple
- (1) Handle, 3/4" x 2 1/2" x 20" maple
- (1) Bottom Center, 3/4" x 2 1/2" x 12" maple

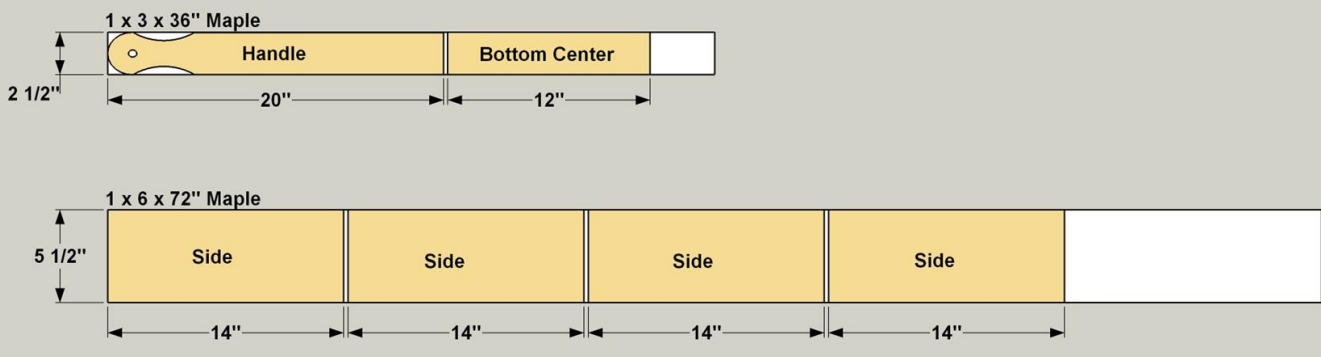

Attention: Almost any do-it-yourself project involves risk of some sort. Your tools, materials, and skills will vary, as will the conditions at your project site. BuildSomething has made every effort to be complete and accurate in the instructions of certified plans. BuildSomething will not assume any responsibility or liability for damages or losses sustained or incurred in the course of your project or in the use of the item you create. Always follow the manufacturer's operating instructions in the use of tools, check and follow your local building codes, and observe all commonly accepted safety precautions. We strive to be accurate, but reserve the right to correct any errors.

Copyright © 2017 Kre Tool Company/BuildSomething. All Rights Reserved.

